



PIPE PREPARATION

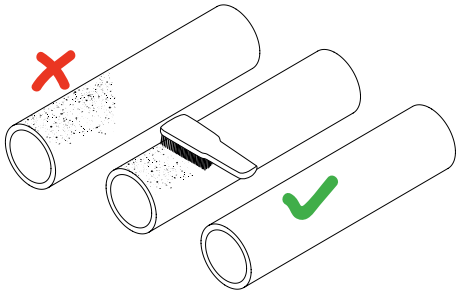


1. Clean the pipe


DN	Min. "E"
	mm
DN 50	86
DN 65	94
DN 80	97
DN 100	102
DN 125	108
DN 150	125
DN 200	138

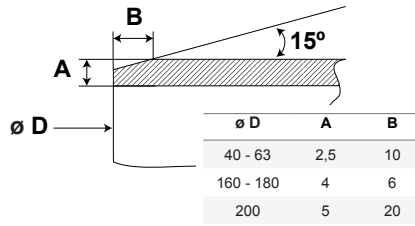


2. Chamfer the pipe

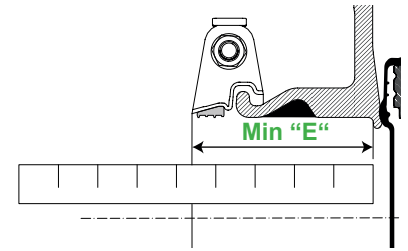

3. See tube insertion depth (E) in product

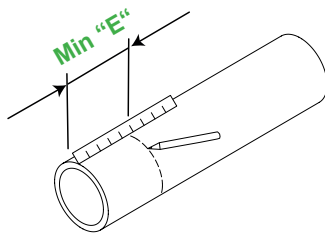


4. Mark the insertion depth (E) in the tube

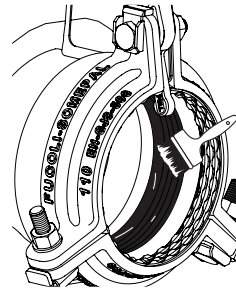

5. Lubricate the lip seal ring and pipe. **Don't use oil**


ASSEMBLY INSTRUCTIONS

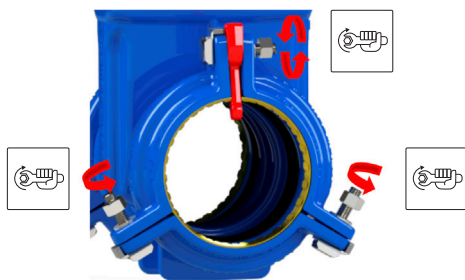


1. Loose the screws




2. Raise the stop tab

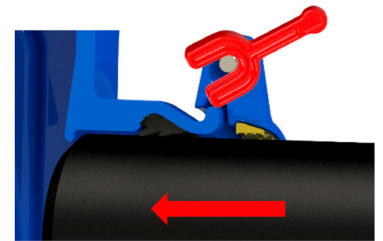


3. Insert the pipe until the stop

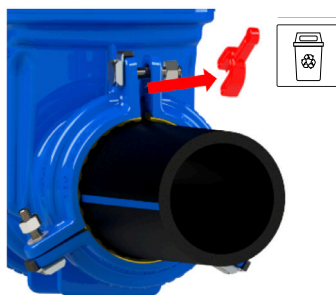


4. Removing the stop tab

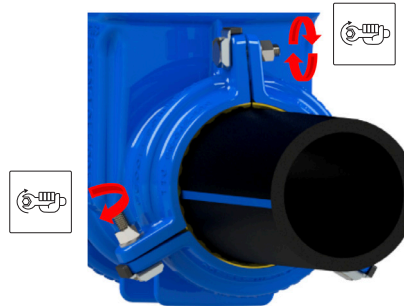


5. Tight the locking system

	Bolt		Torque
50 / 63	M10	17 mm	30 - 40 Nm
65 / 75			
80 / 90			
100 / 110			
125 / 125	M12	19 mm	50 - 70 Nm
150 / 160			
200 / 200			

DISMANTLING INSTRUCTIONS

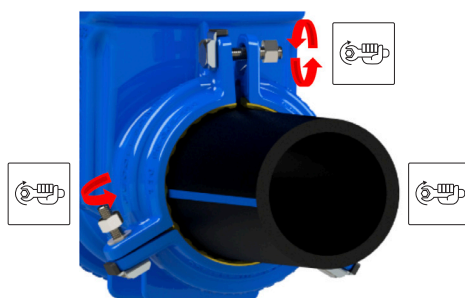

1. Loose the screws

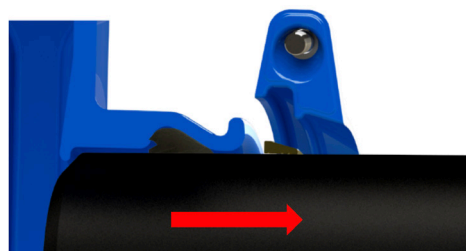

2. Remove the pipe

HEAD OFFICE
Estrada de Coselhas
3000-125 Coimbra - PORTUGAL
Tel.: (+351) 239 490 100
Fax: (+351) 239 490 198
comercial.sede@fucoli-somepal.pt

BRANCH OFFICE
Rua de Aveiro 50
3050-420 Pampilhosa - PORTUGAL
Tel.: (+351) 239 490 100
Fax: (+351) 231 949 292
comercial.filial@fucoli-somepal.pt